



## ***Brush Seal Kit Installation***




### **Included with Brush Seal Kit:**

- 1) Top Brush Seal: Straight Holder x 2" or 3" Brush
- 2) Side Brush Seal: 45deg Holder x 2" or 3" Brush
- 3) Fasteners: Self-drilling fasteners included with brush seal kit


### **Tools Required:**

- 1) Screw gun / Drill
- 2) 1/4" hex-head driver bit for screwing in fasteners
- 3) 1/8" drill bit for pre-drilling holes in Aluminum Holders
- 4) Hack saw or chop-saw for cutting down Aluminum Holders (if req)
- 5) Bolt cutter for cutting down brush (if req)

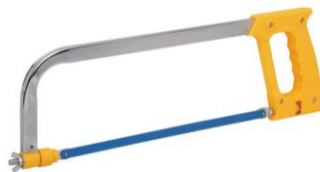




*Step 1:* Remove any existing weather stripping from around the perimeter of the door

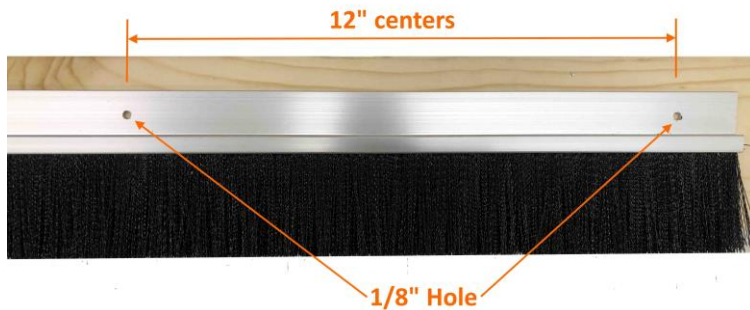

*Step 2:* Pre-drill 1/8" holes in aluminum holder at 12" centers. 9 holes per 8ft holder.

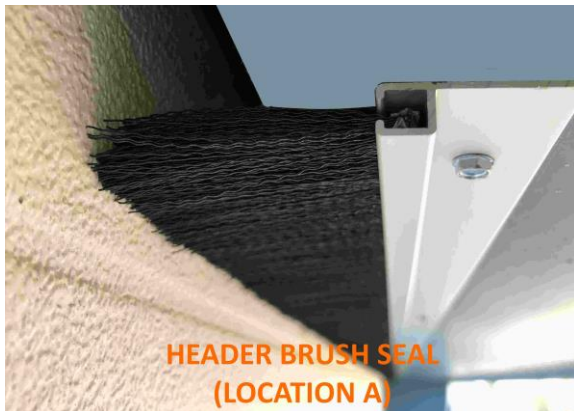

***Tops: Straight Holder + Brush***

*Step 3:* The header seal will use the straight brush seal which allows the door to move freely up and down.

*Step 4:* Mount the 8' Lg Straight Brush Seal across the exterior top of the door header using the fasteners provided (1/4" driver bit). If the header is heavy gauge steel use a 5/64" drill bit to pre-drill hole for fasteners. Ensure the brush is making contact with the door panel across the entire length.



*Step 5:* If your brush seal kit is 10' wide +, you will have received 2 straight brush seals. Continue the brush seal across the header – cut back if brush seal is too long (see Step 6 for cutting instructions).

*Step 6 (if required):* Cutting – separate brush from holder by sliding it out.

Brush – use bolt cutter; Aluminum holder – use hack saw or chop saw



***Sides: 45deg Holder + Brush***



*Step 6:* The side seals will use the 45deg brush seal which keep bristles facing towards the center of the door and constant pressure on the door face.

*Step 7:* Starting from the bottom mount the 8' brush to the exterior jamb.





*Step 8:* If your brush seal kit is 10' high +, you will have received 2 45deg brush seals. Continue the brush seal up to the header brush seal – cut back if the brush seal is too long (See step 5 for cutting instructions).

*Step 9:* The brush seals won't line up in the corner due to the 45deg and straight holder being offset differently.

*Step 10:* Open and Close the door to ensure a proper seal.

